

COMMENT RACCORDER VOTRE ENTRÉE


Pieces in pack:
1 FM receiver
2 screws
1 FM aerial 75 Ω

1) Put away the obturator at the rear of appliance.



2) Screw the receiver on the main chassis.

Vis CHC3x6

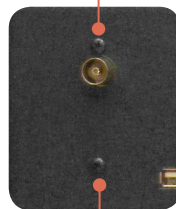

Vis CHC3x6

3) Plug in the FM receiver on the main board.

FM receiver



See CD30 owner's manual for details.