


HOW TO CONNECT YOUR PHONO INPUT

Your Intergrated / preamp. is equipped with a phono stage MM (P50) or MM/MC (P100). To use it, you have to plug it on the Auxiliary Input.

The signal connection is made on the AUXILIARY input.

To avoid any parasite noise, you must link the ground of your Phono to the screw which is placed under the Auxiliary input (rear of appliance).

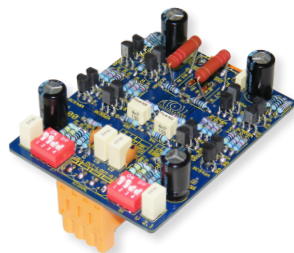

Rear view of appliance:



The selection of the Phono has to be made by the selector keys on the AUX. position.



Warning : Never plug in the AUX. Input any other kind of sources : CD player, Tuner, Tape...