


INSTALLATION OF PHONO BOARD P50 or P100  
(IN50-80-100 + PR100-200)


1.- Screw the ground material on the chassis.


- The hole is near the AUX input.
- Place a lock washer on either side of the chassis then tighten the nut up with a spanner to ensure good electrical contact.
- Then screw the column with your fingers.

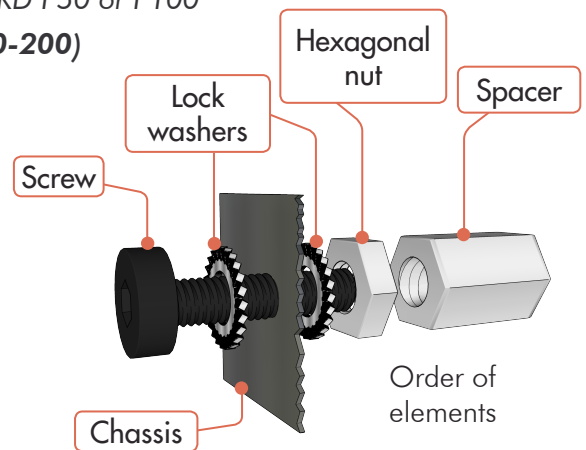


2.- Preparation on main board.

OLD MODELS (NOT SE - BEFORE 2008):

Cut out the three straps (  )

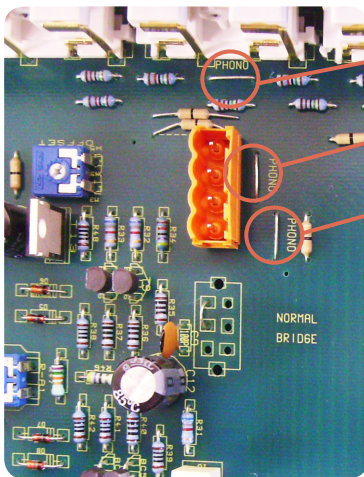

SIG & SE SERIES (IN&PR):

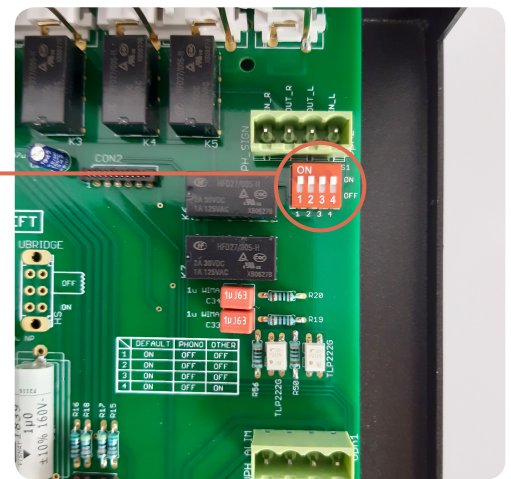

Commute all the four connectors OFF

IN200 Sig & PR300 Sig MODELS



3.- Place the phono stage on the orange connectors of the main board. (Only one way possible).

4.- Important: the phono input is an AUX input. (Phono on display).