


# ASSOCIATION OF A DONGLE WITH A DAC200 OR A WIRELESS BOARD

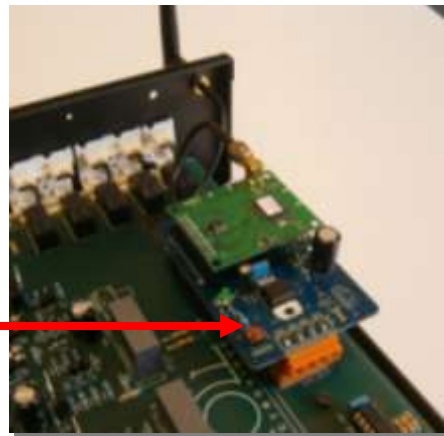

Association key (A)



## ASSOCIATION

When you purchase a new ATOLL « dongle », you have to associate it with the receiver board. Follow those instructions: keep pressing simultaneously association keys on the wireless board or DAC200 (A) and of the new “dongle” (B) (linked) till the indicator LED quickly blink. The “Dongle” and the receiver board are associated when blinking becomes slower (about 1 beat every 7 seconds).



Association key + led (B)

